



Budget EZ AIR Instructions


**For the system to evenly deflate and inflate all four tires, you must follow the directions in the order they are in below. Please also ensure all connections are secure and are not leaking before using. Any leaks will result in uneven tire pressure.

Deflation—

1. Ensure the valve is closed on the manifold and attach the gauge to the Schrader valve.
2. Attach both tire hoses to the manifold.
3. Attach tire hoses to your tires.
4. Open the valve to let pressure out of your tires. Periodically close the valve to check your tire pressure.
5. Close the valve once you reach your desired deflate PSI.
6. Disconnect the tire hoses from the tires.
7. Disconnect the tire hoses from the manifold.

Inflation—

1. Ensure the valve is closed on the manifold and attach the gauge to the Schrader valve.
2. Attach each tire hose to the manifold.
3. Attach the tire hoses to your tires.
4. Attach your air source to the manifold via the quick connect or the Schrader valve depending on your air source.
The EZ Air system works best when paired with our 299LPM Beast Air Compressor.
5. If you are connecting your air source via the quick connect, open the valve and power on your air source. If you are connecting your air source to the Schrader valve, keep the the valve closed and power on your air source. Periodically shut the inflate valve to check the tire pressure.
6. Once your desired tire pressure is reached, turn off your air source and shut the valve.
7. Disconnect the tire hoses from the tires.
8. Disconnect the tire hoses from the manifold.

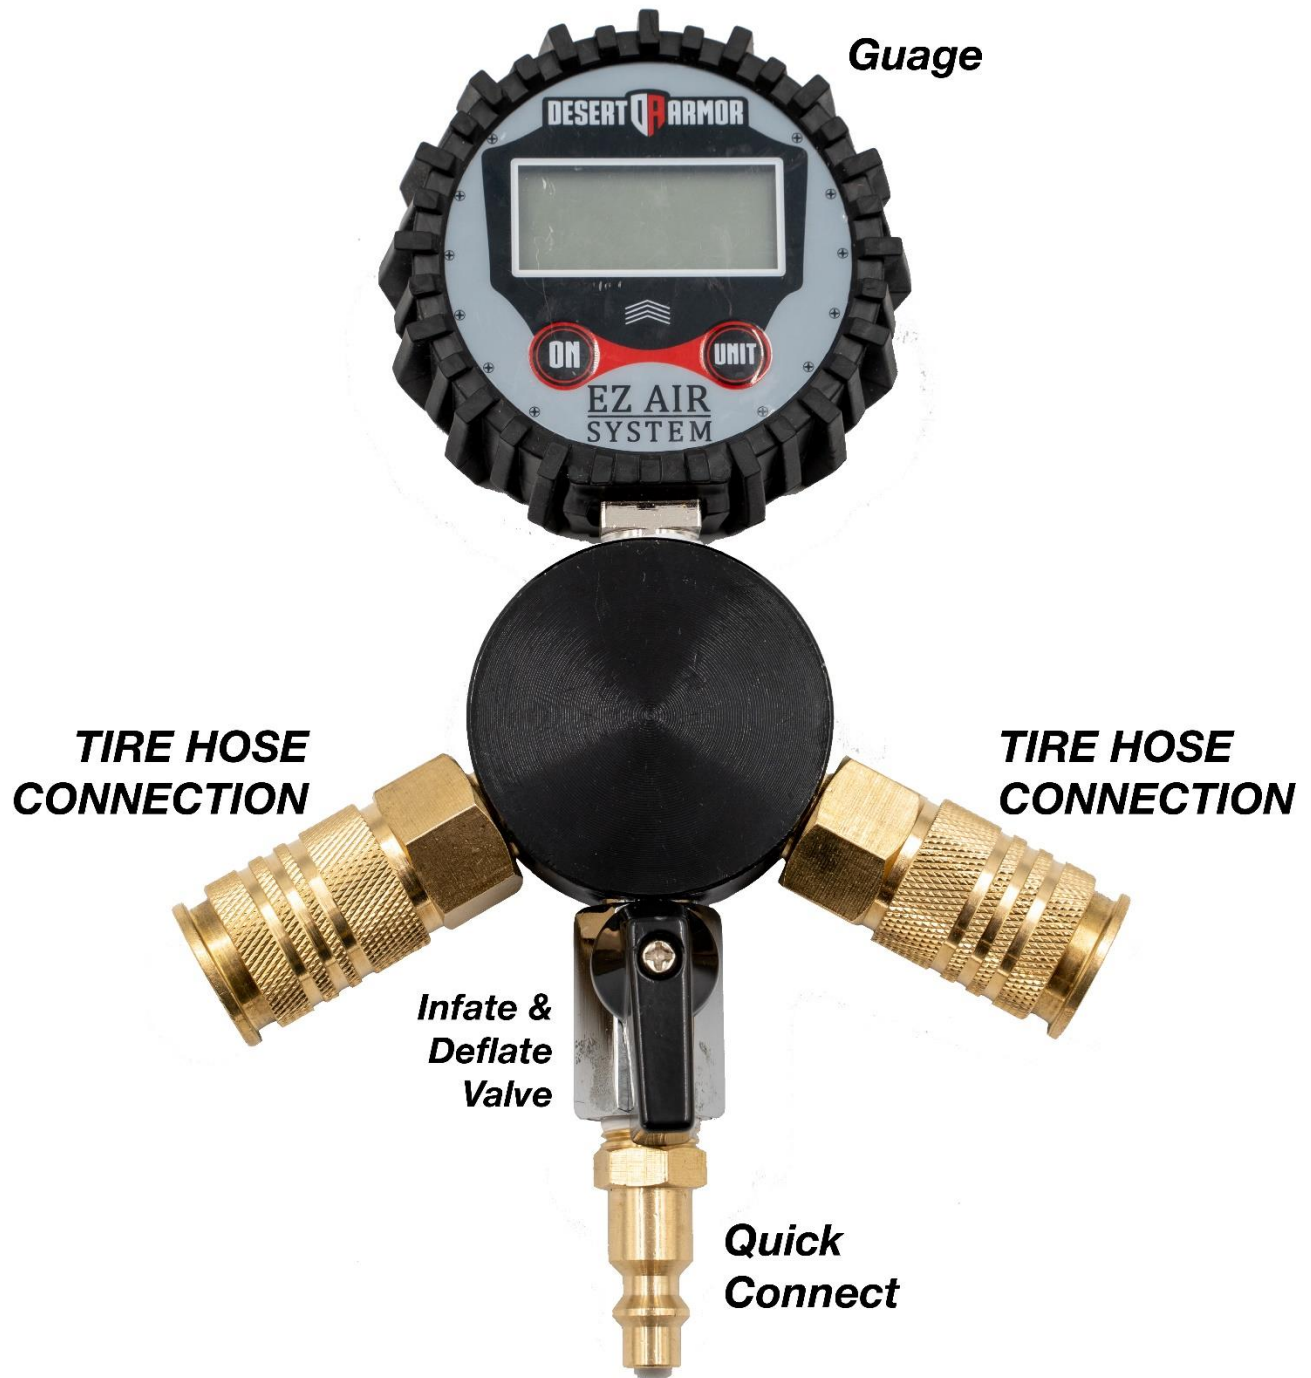

Follow us on Instagram and Facebook for a chance to win free gear and for the latest updates! **@DESERTARMORSHOP**

Leave a product review on our website, shoot us a DM or email saying you left a review with your name/address and we'll send you some Desert Armor swag on us! We GREATLY appreciate it and your support!

DESERTARMORSHOP.COM